


Removal


1 Push seat completely forward.

2 Remove screw from slide rail and pull slide rail out of seat fitting.

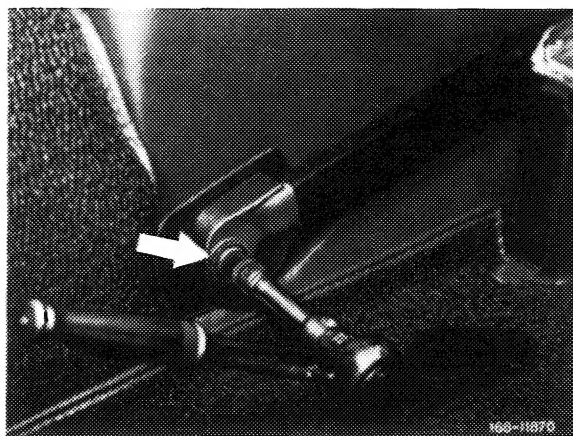


3 Remove screw on side member and at bottom (arrow).

4 Push seat completely toward the rear.

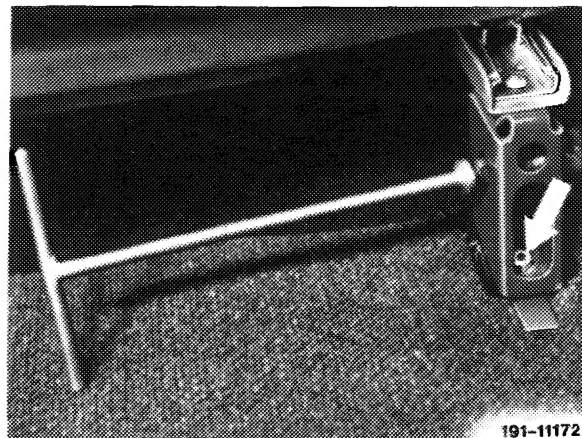


5 Remove screws on both sides of front seat guide rails.

6 Lift out seat.

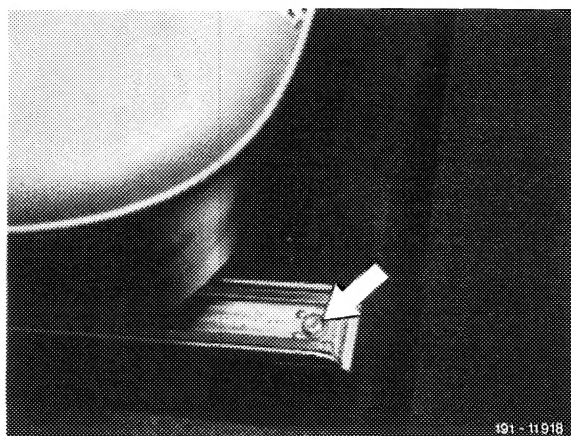

Installation

- 7 Align bracket for attaching seat to rear consoles (arrow) and to cross member.
- 8 For further installation proceed vice versa.

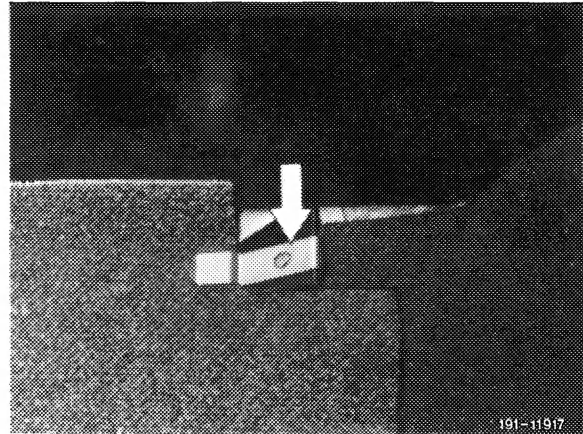

Note: The slide rail is inserted through opening on reclining seat fitting and is attached at the rear only.

